


Blockhouse Click Pen Kits Assembly Instructions

Required Accessories

- 7mm pen mandrel
- 2-piece Bushing Set
- 10mm Drill Bit
- Live Tailstock Centre
- Glue (Thick CA or Epoxy)

Preparing the Blank

- Cut 1 blank to the length of the tube and add 1/16" for squaring off.
- Drill a 10mm hole lengthwise through the blank.
- Spread glue over the tube; insert the blank with a twisting motion to spread the glue evenly inside.
- Centre the tube lengthwise inside the blank.
- When the glue is dry, square the ends of the blank. Use a barrel trimmer, or a universal pen blank squaring jig with a power disc sander. Take the excess material down flush with the ends of the brass tube. (Do not trim beyond the length of the tube since this may interfere with operation of the mechanism and assembly). Use a barrel trimmer to clean the inside of the tube.

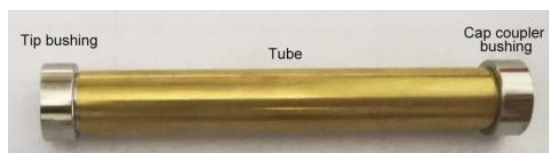

Turning the Blank

- Mount the bushings and blank according to the diagram above.
- Thread on the knurled nut and hand tighten to hold all components in place.
- Slide the tailstock up snugly against the mandrel shaft inserting the live centre point into the mandrel dimple, lock in place.
- Hand tighten the quill adjustment to firm up the mandrel. (DO NOT overtighten, it could damage the mandrel.)
- Using sharp tools, turn the blank down close to the bushing diameter. Turn the barrel (straight or to a profile of your choice)
- Sand the blank down to be flush with the bushings gradually increasing the sandpaper grits.
- Finish the barrel with your choice of polish. Allow sufficient time for the polish to cure.

Diagram A



Assembly

- Arrange parts according to Diagram A.
- Press the tip nut into one end of the tube.
- Thread the white tube of click mechanism into the cap coupler, then press the cap coupler into the other end of tube.
- Slide the click mechanism into the cap coupler.
- Insert the refill with the spring into the open end of the nut. Note: Make sure the refill go through the tube end to show the clip mechanism.
- Thread the tip onto the nut.
- Thread the click spring and the button coupler onto the end of the clip coupler.
- Note: Do not over tighten the assembly onto the click Mechanism.
- Thread the clip/cap assembly into the button coupler.
- To advance the refill press the end of the clip/cap assembly, to retract the refill press the end of the clip/cap assembly again.